The only official copy of this file is the one on-line on the Superconducting Magnet Division website. Before using a printed copy, verify that this is the most current version by checking the document issue date on the website.

# **SMD Operations Procedures Manual**

# 8.1.3.11 OPERATION OF COOLDOWN #2 SYSTEM

Text Pages 1 through 2

# **Hand Processed Changes**

HPC No.	<b>Date</b>	Page Nos.	Initials
			-
		Revision No. 00	Approved:
			_
		Division Head	Date

The only official copy of this file is the one on-line on the Superconducting Magnet Division website. Before using a printed copy, verify that this is the most current version by checking the document issue date on the website.

### 8.1.3.11 Operation of Cooldown #2 System

## 1.0 Purpose

This procedure provides instructions for STARTUP/SHUTDOWN and operation.

### 2.0 Responsibilities and Scope

Operator is responsible for STARTUP/SHUTDOWN and operation of Cooldown #2.

### 3.0 Prerequisites

- 3.1 Operator shall be trained by a supervisor or an authorized operator.
- 3.2 Training shall include operation of 100 HP Sullairs, Cooldown #1, Test and Measure, Mycom compressor and the Model 4000 refrigerator (MAGCOOL Refrigerator).

#### 4.0 Precautions

- 4.1 Hearing protection will be worn in the Compressor Rooms and in the Refrigeration Room. (MODEL 4000).
- 4.2 Ensure only authorized personnel are on Cooldown #2, or are escorted by an authorized person.

#### 5.0 Procedure

- 5.1 **Test and measure system must be running**, with liquid He in Pre-cooler and Sub-cooler pots.
- 5.2 To remove magnet from Cooldown #1.
  - 5.2.1 Page D9, cursor to Cooldown #1, Press **CLEAR**. Enter in Logbook.
- 5.3 To install magnet in Cooldown #2.
  - 5.3.1 Display Pg. D9, cursor on Cooldown #2, Press **SET**. Enter in Logbook.

The only official copy of this file is the one on-line on the Superconducting Magnet Division website. Before using a printed copy, verify that this is the most current version by checking the document issue date on the website.

- 5.4 Magnet is completed when done **FLAG** appears.
  - 5.4.1 Done flag appears at  $10^0$  K.
- 5.5 Operation of Cooldown #2 is computer controlled.

# **6.0** Documentation

6.1 Documentation is kept in the MAGCOOL logbook located in Building 902.

## 7.0 References

- 7.1 Operations and Maintenance manual provided by CVI is kept in the MAGCOOL Control Room located in Building 902.
- 7.2 An Operators Problem Guide and Operations Guide is give to all operators and a copy is kept in the MAGCOOL Control Room located in Building 902.

### 8.0 Attachments

None